

SAFESOL Checkmate Odour Eliminator


What: SAFESOL Checkmate

Where: Checkmate is an odour eliminator that can be sprayed or poured onto any hard or porous surface.

Checkmate gets rid of everyday bad smells such as urine, vomit, household rubbish, cigarette smoke and much, much more.

When: Anytime. It can be sprayed or poured on surfaces. It should be left undisturbed for about 5-10 minutes.

Why: SAFESOL Checkmate destroys the source of the smell rather than just masking the odour. It is enzyme based and contains a detergent.

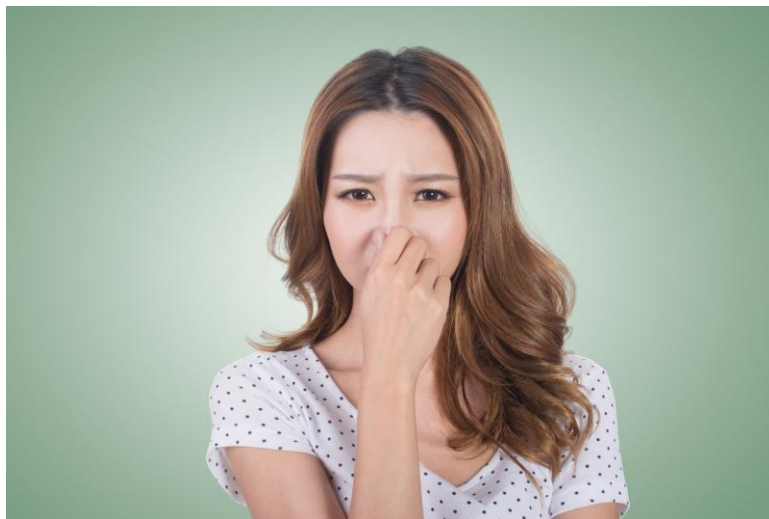

How:

Prior to use test on a hidden area for colour fastness.

Step 1) Remove any excess solids or liquids from the area.

Step 2) Spray the soiled area and be sure to saturate the carpet backing and underlay if required.

Step 3) Wait 10 or more minutes for the enzymes in Checkmate to break down the organic proteins. Excess moisture can be blotted with a clean cloth.

Step 4) Allow the area to dry naturally.

Call +44 (0) 191 447 8008 (Ask for Vicki)

www.safesol.co.uk

SAFESOL Checkmate Odour Eliminator

Step 5) For larger areas such as kitchen and bathroom floors Checkmate can be diluted one-part Checkmate to five parts water. Please note that when using on hard flooring the surface may become slippery until residue is wiped away.

SAFESOL Checkmate Health and Safety

SAFESOL recommend that eye contact should be avoided. In the case of eye contact flush thoroughly with water for 15 minutes and seek medical attention if irritation persists. Keep this and all cleaning products out of reach of children and animals

Please consult the MSDS for further information.